

## Converting playbacks to AVI [Superview 4,8 & 16 Channel Dvrs]


[This note applies to all Superview series Dvrs]

Step 1: First start out by downloading the newest video player for the Flex from our website which can be located on our support page (<http://www.securitycameraworld.com/customer-service/downloads.asp>) under Superview version 1 downloads.

Step 2: When finished downloading, install the new video player by opening the installer and following the easy prompts.

Step 3: When done with the install, run the player from the icon on your desktop.

Step 4: Once opened, look for the small icon on the player called "AVI"

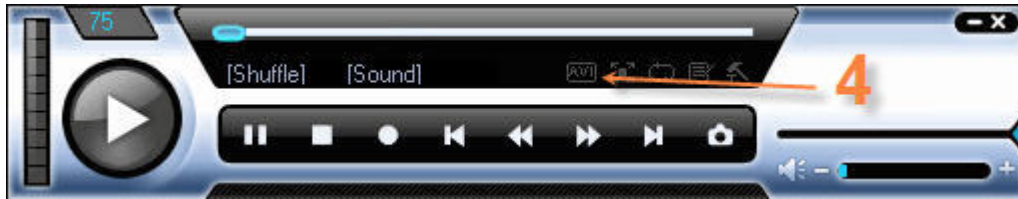


Step 5: This will in turn open another window called "AVI Builder"

Step 6: Now click on the "..." button on the right.

Step 7: This button will open a window for you to search for the playback file you downloaded from your DVR. Highlight the playback file you want to convert and click "Open". Note: Remember or copy the directory where you found the playback file from your DVR.

Step 8: Once your sure you picked the right file, click on "Convert" at the bottom and you'll start to see the status bar complete the conversion.

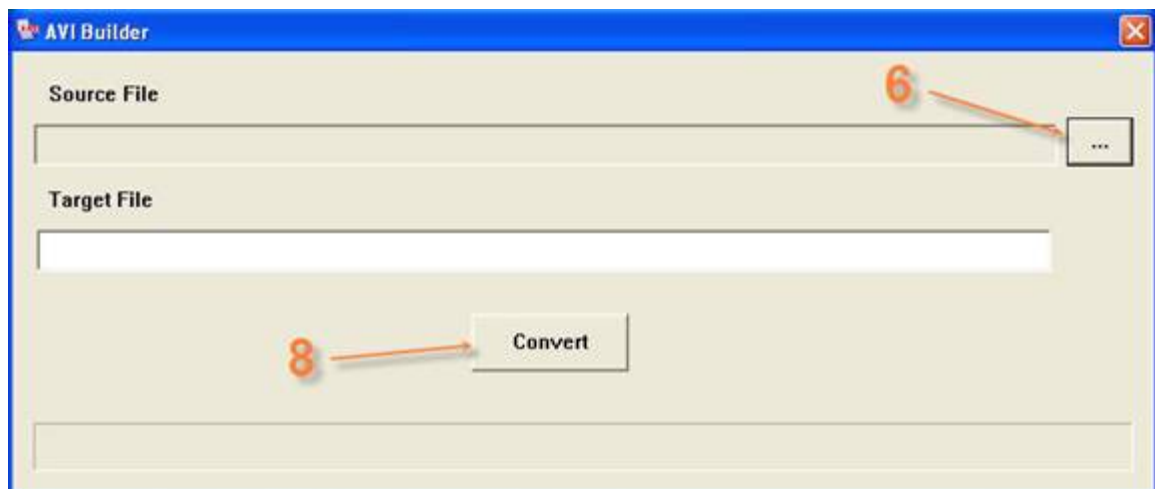

Step 9: Once finished, look in to the same directory you found the playback file you wanted converted and you should now see the same named file yet in an .AVI format.

Note: Remember that the new file still holds true to its MPEG4 encode so even though now you have an .AVI file (which most media players run such as windows media player) you still need a player that's capable of decoding MPEG4 codec.